

 
3-5. Using the hands-free system (for cellular phone)
Hands-free system (for cellular phone)* (without navigation system)

The hands-free system is a function that allows you to use your mobile phone without touching it.

This system supports Bluetooth[®] mobile phones. Bluetooth[®] is a wireless data system that allows the mobile phone to wirelessly connect to the hands-free system and outgoing/incoming calls.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

■ Telephone switch

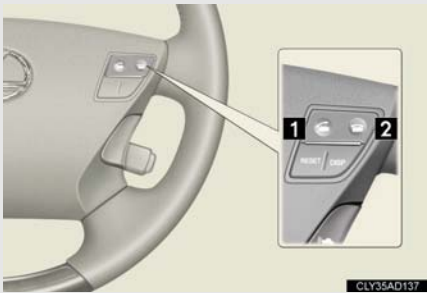

- 1 Sending/Receiving/
"Phone" screen display
- 2 End call/Refuse call

■ Microphone



The person you are speaking to can be heard from the driver's side speaker.

To use the hands-free system, you must register a Bluetooth[®] phone in the system. (→P. 536)

*: If equipped

 




3-5. Using the hands-free system (for cellular phone)

Status display

You can check such indicators as signal strength and battery charge on the “Phone” screen.



- 1 Connection status
- 2 Battery charge
- 3 Call area
- 4 Signal strength

Indicators	Conditions
Connection status	Blue: Good Yellow: Bad  : Not connected
Battery charge	Full  ↔ Empty 
Call area	"Rm": Roaming area "Hm": Home area
Signal strength	Excellent  ↔ Too bad 

■ When using the hands-free system

- The audio system and voice guidance are muted when making a call.
- If both parties speak at the same time, it may be difficult to hear.
- If the incoming call volume is overly loud, an echo may be heard.
- Try to face the microphone as much as possible when speaking.
- In the following circumstances, it may be difficult to hear the other party:
 - When driving on unpaved roads
 - When driving at high speeds
 - If a window is open
 - If the air-conditioning is blowing directly on the microphone
 - If the air-conditioning is set to high
 - There is an effect from the network of the cellular phone

■ Conditions under which the system will not operate

- If using a mobile phone that does not support Bluetooth®
- If the mobile phone is turned off
- If you are outside service range
- If the mobile phone is not connected
- If the mobile phone's battery is low

■ Bluetooth® antenna

The antenna is built into the instrument panel. If the mobile phone is behind the seat or in the console box, or touching or covered by metal objects, connection status may deteriorate.

■ Battery charge/Signal status

This display may not correspond exactly with the mobile phone itself.

■ When using Bluetooth® audio and hands-free system at the same time

The following problems may occur.

- The Bluetooth® connection may be cut.
- Noise may be heard on the Bluetooth® audio playback.

3-5. Using the hands-free system (for cellular phone)

■ About the phonebook in this system

The following data is stored for every registered phone. When another phone is connecting, you cannot read the registered data.

- Phonebook data
- Voice tag
- All of call history
- Speed dial

When you delete the phone, the above-mentioned data is also deleted.

■ When you release your car

Be sure to initialize your data. (→P. 348)

■ About Bluetooth®



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ Compatible models

This system supports the following service.

- Bluetooth® Specification:
Ver. 1.1 or higher (Recommended: Ver. 1.2 or higher)
- Profiles:
 - HFP (Hands Free Profile) Ver. 1.0 or higher (Conformed: Ver. 1.5)
 - OPP (Object Push Profile) Ver. 1.1
 - PBAP (Phone Book Access Profile) Ver. 1.0

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP or PBAP service individually.

■ Certification

FCC ID: AJDK021
IC ID: 775E-K021
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules and RSS-Gen and RSS-210 of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION

■ FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Frequency Radiation Exposure. This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 7.9 in. (20 cm) and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

■ While driving

Do not use the mobile phone or connect the Bluetooth[®] system.

NOTICE

■ When leaving the vehicle

Do not leave your mobile phone in the vehicle. The inside of the vehicle may become hot, causing damage to the phone.

3-5. Using the hands-free system (for cellular phone)
Using the Bluetooth® phone



- 1 Device name
- 2 Bluetooth® connection status
- 3 Character deletion
- 4 Make a call

To display the screen shown above, press “INFO/PHONE”, and touch



on the “Information” screen.

Registering a Bluetooth® phone

You can register up to 4 phones in the system.

STEP 1 Display the “Phone” screen. (→P. 535)

STEP 2

Touch “Yes”.



STEP 3

Input the passcode displayed on the screen into your phone.



For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, select “Cancel”.

If a completion message is displayed, registration is complete.

If an error message is displayed, follow the guidance on the screen to try again.

Connecting a Bluetooth® phone

There are two connection methods available-automatic and manual.

► Automatic



When you register your phone, auto connection will be activated. Always set it to this mode and leave the Bluetooth® phone on the place where connection can be established.

When the “ENGINE START STOP” switch is turned to ACCESSORY or IGNITION ON mode, the system will search for a nearby cellular phone you have registered. Next, the system automatically connects with the most recent of the phones connected to in the past. Then, the connection result is displayed.

3-5. Using the hands-free system (for cellular phone)

► Manual

When the auto connection has failed or “Handsfree Power” is turned off, you must connect Bluetooth® manually.

STEP 1 Display the “Phone” screen. (→P. 535)



Touch “Connect Phone”.



Touch “Handsfree Power”, or touch the phone to connect.



The “Connect Bluetooth*” screen is displayed.

If a completion message is displayed, connection is complete.

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

■ Reconnecting to the Bluetooth® phone

If the system cannot connect due to poor signal strength with the “ENGINE START STOP” switch in ACCESSORY or IGNITION ON mode, the system will automatically attempt to reconnect.

If the phone is turned off, the system will not attempt to reconnect. In this case, connection must be made manually, or the phone must be re-selected or re-entered.

■ Connecting the phone while Bluetooth® audio is playing

- Bluetooth® audio will stop temporarily.
- It may take time to be connect.

Making a call


Once the Bluetooth[®] phone is registered, you can make a call using the following procedure:

■ Dialing

STEP 1 Display the “Phone” screen. (→P. 535)



Input the phone number.

To delete the inputted phone number, touch .

To dial the last inputted phone number, touch “Redial”.

STEP 3 Touch  or press  on the steering wheel.

■ Dialing from the phone book

You can dial a number from the phonebook data imported from your mobile phone. The system has one phonebook for each telephone. Up to 1000 entries may be stored in total for phonebooks. (→P. 556)

STEP 1 Display the “Phone” screen. (→P. 535)

STEP 2 Touch “Contacts” on the “Phone” screen.





Choose the desired data to call from the list.

If the phonebook is empty, a message will be displayed.

If you want to transfer new contacts from a cellular phone, touch "Yes".



Choose the number and then touch  or press  on the steering wheel.

■ Calling using speed dial

You can make a call using numbers registered from the phone book. (→P. 564)

STEP 1 Display the "Phone" screen. (→P. 535)

STEP 2 Touch "Speed Dials" on the "Phone" screen.



Select the desired tab and choose the desired number to make a call.

■ Dialing from history

You can use the call history which has the 4 functions shown below.

“All”: all the numbers below which were memorized

“Missed”: calls which you missed

“Incoming”: calls which you received

“Outgoing”: numbers which you called

You can call using the 5 most recently called numbers shown by “All” while driving.



STEP 1 Display the “Phone” screen. (→P. 535)

STEP 2 Touch “Call History” on the “Phone” screen.



Select the desired tab and choose the desired data from the list.



Touch  or press  on the steering wheel.

 
■ Calling using voice recognition

Voice commands can also be used for “Dial by number”, “Dial by name”, “Redial”, “Call back” and “Connect Phone”. The procedure below shows “Dial by name”. Follow similar procedures for the other four operations.

● Dial by name


You can call by giving a voice tag registered in the phonebook.
(→P. 570)

▶ Without paddle shift switches

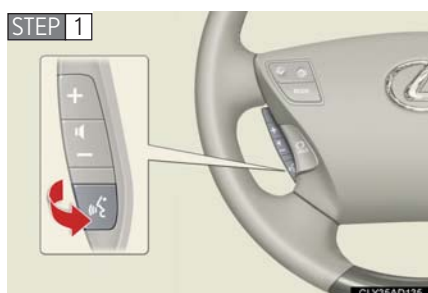

Pull .

 ▶ With paddle shift switches

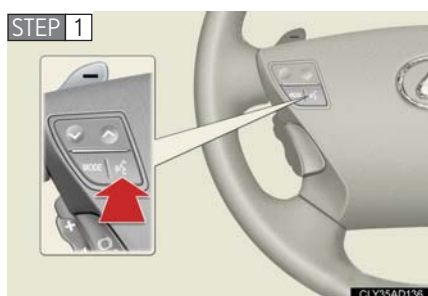


Press .

STEP 2 Following the system guidance, wait for the beep, and then say “Dial by name”.

STEP 3 Following the system guidance, wait for the beep, and then say the desired name.

STEP 4 Following the system guidance, wait for the beep, and then say the desired number.

3-5. Using the hands-free system (for cellular phone)

STEP 5 Following the system guidance, wait for the beep and then say “Dial” or press  on the steering wheel.

■ Call history list

- If you make a call to or receive a call from a number registered in the phone book, the name is displayed in the call history.
- If you make multiple calls to the same number, only the last call made is displayed in the dialled history.
- Calls where the number is unavailable, such as public telephones, are not stored in the call history.


■ When driving

The functions “Dialing”, “Dialing from the phonebook”, and “Dialing from history” (except for call using the 5 most recently called numbers shown by “All” tab) are unavailable.


■ International calls


You may not be able to make international calls, depending on the mobile phone in use.

■ Calling by using the latest call history item




STEP 1 Press  on the steering wheel to display the “Phone” screen.

STEP 2 Press  on the steering wheel to display the “Call History” screen.


STEP 3 Press  on the steering wheel to select the most recent number in the history.

STEP 4 Touch  or press  on the steering wheel.

■ To cancel voice recognition

 
- Pull and hold  or press and hold .
- Press  on the steering wheel.
- Touch or say “Cancel”.



■ When using voice recognition

- Commands operable by a voice command are marked with . Say the command displayed on the screen.
- Speak clearly when using the voice recognition, otherwise the system may not correctly recognize your voice. Wind or other noises may also cause the system not to recognize your voice.

Receiving a call

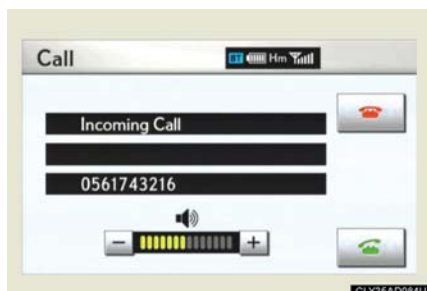When a call is received, the following screen is displayed together with a sound.



Touch  or press  on the steering wheel.

■ To refuse a call

Touch  or press  on the steering wheel.

■ To adjust the ring tone volume

Touch “-” or “+”. You can also adjust the volume using the steering switches.

■ International calls

Received international calls may not be displayed correctly, depending on the mobile phone in use.

Speaking on the phone

The following screen is displayed when speaking on the phone.



■ To adjust the receiver volume

Touch “-” or “+”. You can also adjust the volume using the steering switches.

■ To prevent the other party from hearing your voice

Touch “Mute”.

■ Inputting tones

When using phone services such as an answering service or a bank, you can store phone numbers and code numbers in the phone book.

STEP 1 Touch “0-9”.

STEP 2



Input the number.

If repeated tone symbols* are stored in the phone book, “Send” and “Exit” are displayed on the right side of the screen.

*: Repeated tone symbols are symbols or numbers displayed as p or w, that come after the phone number.
(e.g. 056133w0123p#1*)

STEP 3 Confirm the number displayed on the screen, and touch “Send”.

If you touch “Exit”, this function will end.

■ To transfer a call

Touch “Call Transfer”.



■ To hang up



Touch  or press  on the steering wheel.

■ Call waiting

When a call is interrupted by a third party while talking, the receiving call message will be displayed.

● To talk with the other party: Touch  or press  on the steering wheel.

● To refuse the call: Touch  or press  on the steering wheel.

Every time you touch  or press  on the steering wheel during call waiting, you will be switched to the other party.

If your cellular phone is not compliant with HFP Ver. 1.5, this function cannot be used.

■ Transferring calls

- It is not possible to transfer from hands-free to the mobile phone while driving.
- If you transfer from the mobile phone to hands-free, the hands-free screen will be displayed, and you can operate the system using the screen.
- Transfer method and operation may vary according to the mobile phone used.
- For operation of the mobile phone in use, see the phone's manual.

■ Call waiting operation

Call waiting operation may differ depending on your phone company and cellular phone.

 
■ While driving

Key input is unavailable.

3-5. Using the hands-free system (for cellular phone)

Setting the hands-free system

You can set the hands-free system to your desired settings.

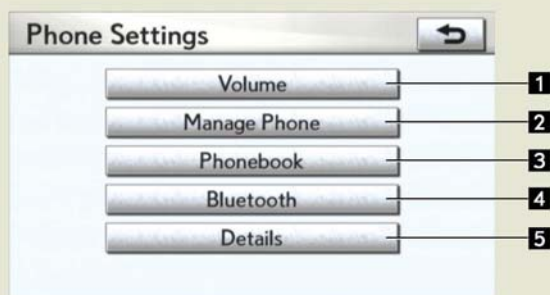

- 1 Setting the volume
- 2 Managing the phone
- 3 Phonebook settings
- 4 Bluetooth® settings
- 5 Details settings

 
To display the screen shown above, press "SETUP", touch "Phone" on the "Setup" screen.

Setting the volume

STEP 1 Display the “Phone Settings” screen. (→P. 549)

STEP 2 Touch “Volume” on the “Phone Settings” screen.

STEP 3

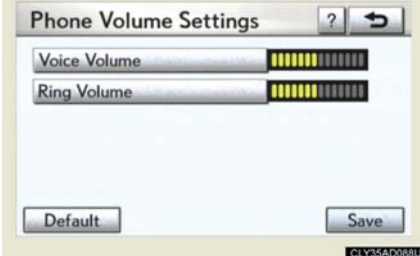

Choose the volume setting switch.

“Voice Volume”: changes the
speaker volume

“Ring Volume”: changes the ring
volume

STEP 4



Touch “-” or “+” to lower or raise
the volume, and then “OK”.

STEP 5 When you complete all settings, touch “Save”.

■ Adaptive volume control

When traveling at 50 mph (80 km/h) or more, the system automatically raises the volume one level.

If the vehicle speed drops to 43 mph (70 km/h), the volume will return to its original level.

■ To return to the default volume settings

Touch “Default”, and then “Yes”.

Managing the phone

■ Registering a Bluetooth® phone

STEP 1 Display the “Phone Settings” screen. (→P. 549)

STEP 2 Touch “Manage Phone” on the “Phone Settings” screen.

STEP 3



Touch “(add new)” to register your cellular phone to the system.

STEP 4



Input the passcode displayed on the screen into your phone.

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, select “Cancel”.

If a completion message is displayed, registration is complete.

If an error message is displayed, follow the guidance on the screen to try again.

■ Selecting a Bluetooth® phone

If multiple Bluetooth® phones are registered, follow the procedure below to select the Bluetooth® phone to be used. You may only use one phone at a time.

STEP 1 Display the “Phone Settings” screen. (→P. 549)

STEP 2 Touch “Manage Phone” on the “Phone Settings” screen.

STEP 3



Select the phone to be used.

The Bluetooth® mark is displayed when you connect the phone.

If a completion message is displayed, connection is complete.

■ Editing a Bluetooth® phone

You can see the information of the Bluetooth® phone on the system or edit.

STEP 1 Display the “Phone Settings” screen. (→P. 549)

STEP 2 Touch “Manage Phone” on the “Phone Settings” screen.

STEP 3 Touch “Options” on the “Connect Phone” screen.

STEP 4



Touch “Edit Phones”.

STEP 5



Select a phone to edit.

STEP 6



Touch "Edit".

STEP 7



Input the device name, and touch "OK".

STEP 8 Confirm the device name, and touch "OK".

■ Removing a Bluetooth® phone

STEP 1 Display the “Phone Settings” screen. (→P. 549)

STEP 2 Touch “Manage Phone” on the “Phone Settings” screen.

STEP 3 Touch “Options” on the “Connect Phone” screen.

STEP 4 Touch “Remove Phones” on the “Phones” screen.

STEP 5



Select the desired phone. If you want to remove all phones, touch “Select All”.

STEP 6 Touch “Delete”. A confirmation message will be displayed. If everything is correct, touch “Yes”.

■ Registering a Bluetooth® phone in a different way

STEP 1 Display the “Phone Settings” screen. (→P. 549)

STEP 2 Touch “Manage Phone” on the “Phone Settings” screen.

STEP 3 Touch “Options” on the “Connect Phone” screen.

STEP 4 Touch “New Phone” on the “Phones” screen.

STEP 5 Touch “(empty)” on the “Phone Position” screen.

STEP 6 Follow the steps for “Registering a Bluetooth® phone” from “STEP4”. (→P. 551)

■ When another Bluetooth® device is connected during registering or selecting a phone

When another Bluetooth® device is connected, a confirmation message will be displayed. If you want to disconnect it, touch “Yes”.

■ When Bluetooth® audio is connected while registering a phone

When you register your phone, Bluetooth® audio will disconnect. It will reconnect automatically when you finish registration. It will not be reconnected depending on the phone you are using.

■ Connecting the phone while Bluetooth® audio is playing

Bluetooth® audio will disconnect. It will reconnect automatically when you finish connecting the phone. It will not be reconnected depending on the phone you are using.

■ Setting the “Handsfree Power”

The mode changes between on and off every time you select “Handsfree Power” on the “Connect Phone” screen. When “Handsfree Power” is on, the Bluetooth® phone is automatically connected when you turn the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode.

■ Editing the “Device Name”

If you change a device name, the name registered in your cellular phone is not changed.

■ About “Device Address”

 
The address peculiar to the system. You cannot be changed. If you have registered two Bluetooth® phones with the same device name and you cannot distinguish one from the other, refer to this address.

■ When you delete a Bluetooth® phone

The phonebook data will be deleted at the same time.

Phonebook settings

The phonebook manages a maximum of 4 phonebooks in total. The data for up to 1000 contacts (up to 3 numbers per contact) can be registered in total for phonebooks.

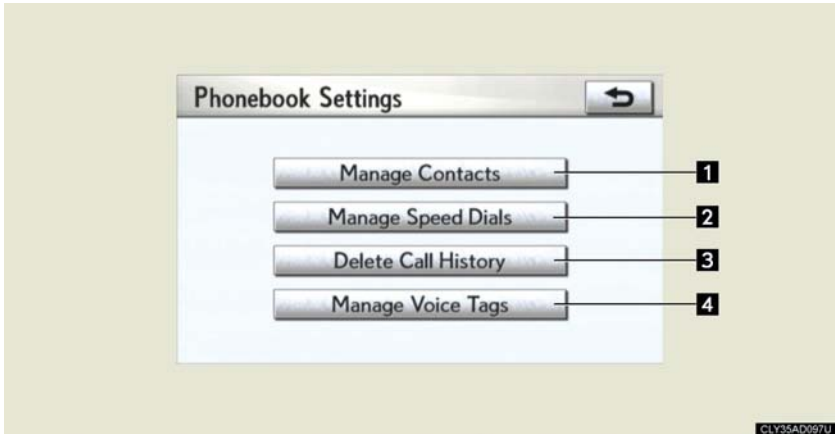

- 1 Setting the phonebook
- 2 Speed dials setting
- 3 Deleting the call history
- 4 Setting the voice tag

To display the screen above, follow the steps below.

- STEP 1** Display the “Phone Settings” screen. (→P. 549)
- STEP 2** Touch “Phonebook” on the “Phone Settings” screen.

■ Setting the phonebook

● Transferring a phone number

You can transfer the phone numbers in your Bluetooth[®] phone to the system.

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Contacts” on the “Phonebook Settings” screen.

STEP 3 Touch “Transfer Contacts”.



Select “Replace Contacts” or “Add Contacts”.

In the case that the phonebook contains phonebook data, this screen is displayed.

3-5. Using the hands-free system (for cellular phone)



Transfer the phonebook data to the system using the Bluetooth[®] phone.

If you wish to cancel the transfer before it finishes, touch "Cancel".

If the transferring is interrupted midway through the process, the phonebook data transferred until then can be memorized in the system.

STEP 6 In the case that you have selected "Add Contacts", a message is displayed.

If you want to transfer another phonebook, touch "Yes".

● Registering the phonebook data

You can register the phonebook data. Up to 3 numbers per person can be registered.

 
STEP 1 Display the "Phonebook Settings" screen. (→P. 556)

STEP 2 Touch "Manage Contacts" on the "Phonebook Settings" screen.

STEP 3 Touch "New Contact" on the "Contacts" screen.



Input the name, and touch "OK".

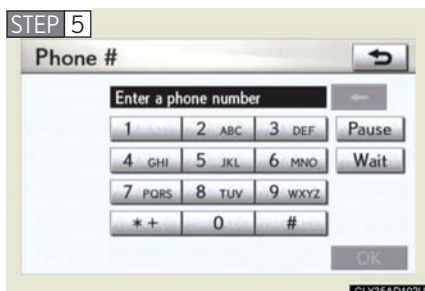

Input the phone number, and touch "OK".

If you want to use the tone signal after the phone number, input the tone signal too.



Touch the desired phone type.

STEP 7 When two or less numbers in total are registered to this contact, a message is displayed. When you want to add a number to this contact, touch "Yes".

3-5. Using the hands-free system (for cellular phone)

● Editing the phonebook data

You can register the phone number separately.

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Contacts” on the “Phonebook Settings” screen.

STEP 3 Touch “Edit Contacts” on the “Contacts” screen.

STEP 4 Choose the data to edit.



STEP 5 Choose “Edit” for the desired name or number.



STEP 6 Edit the name or number. After editing, touch “Save”.

● Deleting the phonebook data

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Contacts” on the “Phonebook Settings” screen.

STEP 3 Touch “Delete Contacts” on the “Contacts” screen.

STEP 4



Choose the data to delete.

You can select multiple data and delete them at the same time.

To delete all data, touch “Select All”.

STEP 5 Touch “Delete”. A confirmation message will be displayed. If everything is correct, touch “Yes”.

■ Phonebook data

Phonebook data is managed for every registered phone. When another phone is connecting, you cannot read the registered data.

■ Setting the phonebook in a different way (To display the “Contacts” screen)

STEP 1 Display the “Phone” screen. (→P. 535)

STEP 2 Touch “Contacts” on the “Phone” screen.

STEP 3 Touch “Options” on the “Contacts” screen.

STEP 4 Touch “Manage Contacts” on the “Contacts” screen.

3-5. Using the hands-free system (for cellular phone)

■ When transferring a phone number

Transfer the phone number while engine is running.

■ When you have selected “Replace Contacts” to transfer the phone number

- If your cellular phone does not support PBAP or OPP service, you cannot use this function.
- If your phone supports PBAP service, you can transfer the phonebook data without operating your phone.
- If your phone does not support PBAP service, you must transfer the phonebook data by operating your phone.

■ When you have selected “Add Contacts” to transfer the phone number

If your cellular phone does not support OPP service, you cannot use this function. You can transfer the phonebook data only by operating your phone.

■ When another Bluetooth® device is connected during transferring a phonebook

When another Bluetooth® device is connected, a confirmation message will be displayed. If you want to disconnect it, touch “Yes”.

■ Transferring the phone number while Bluetooth® audio is playing

Bluetooth® audio will disconnect. It will reconnect automatically when data transfer finishes. It will not be reconnected depending on the phone you are using.

■ Editing the phonebook data in a different way (From “Contact Data” screen)

STEP 1 Display the “Phone” screen. (→P. 535)

STEP 2 Touch “Contacts” on the “Phone” screen.

STEP 3 Choose the desired data from the list.

STEP 4 Touch “Options” on the “Contact Data” screen.

STEP 5 Touch “Edit Contact” on the “Contact Data” screen.

STEP 6 Follow the steps “Editing the phonebook data” from “STEP5”. (→P. 560)

■ Editing the phonebook data in a different way (From “Call History” screen)

- STEP 1** Display the “Phone” screen. (→P. 535)
- STEP 2** Touch “Call History” on the “Phone” screen.
- STEP 3** Choose the desired data from the list.
- STEP 4** Touch “Add Contact” or “Update Contact”.
- STEP 5** If you touch “Add Contact”, follow the steps “Editing the phonebook data” from “STEP5”. (→P. 560)
If you touch “Update Contact”, follow the steps “Editing the phonebook data” from “STEP4”. (→P. 560)

■ Deleting the phonebook data in a different way

- STEP 1** Display the “Phone” screen. (→P. 535)
- STEP 2** Touch “Contacts” on the “Phone” screen.
- STEP 3** Choose the desired data from the list.
- STEP 4** Touch “Options” on the “Contact Data” screen.
- STEP 5** Touch “Delete Contact” on the “Contact Data” screen.
- STEP 6** A confirmation message will be displayed. If everything is correct, touch “Yes”.

■ Speed dials setting

● Registering the speed dial

You can register the desired phone number from phonebook. Up to 18 numbers per phone can be registered.

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Speed Dials” on the “Phonebook Settings” screen.

 


Touch “New Speed Dial”.




Choose the data to register.

STEP 5

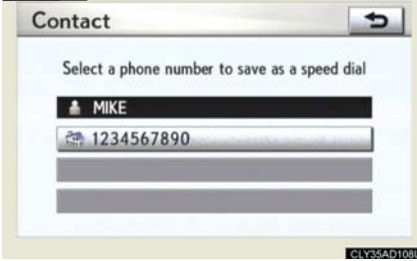

Touch the desired phone number.

 STEP 6

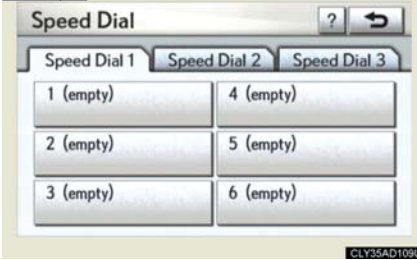

Touch the switch you want to register the number in.

STEP 7

If you select a switch you registered before, a confirmation message will be displayed. If you want to replace it, touch "Yes".

3-5. Using the hands-free system (for cellular phone)

● Editing the speed dial

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Speed Dials” on the “Phonebook Settings” screen.

STEP 3 Touch “Edit Speed Dials” on the “Speed Dials” screen.

STEP 4 Choose the data to edit.



STEP 5 Touch “Edit”.



STEP 6 Edit the name. After editing, touch “OK” and then “Save”.

● Deleting the speed dial

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Speed Dials” on the “Phonebook Settings” screen.

STEP 3 Touch “Delete Speed Dials” on the “Speed Dials” screen.



Choose the data to delete.

You can select multiple data and delete them at the same time.

To delete all data, touch “Select All”.

STEP 5 Touch “Delete”. A confirmation message will be displayed. If everything is correct, touch “Yes”.

■ Setting the speed dials in a different way (To display the “Speed Dial” screen)

- STEP 1** Display the “Phone” screen. (→P. 535)
- STEP 2** Touch “Speed Dials” on the “Phone” screen.
- STEP 3** Touch “Options” on the “Speed Dial” screen.

■ Registering the speed dial in a different way (From “Speed Dial” screen)

- STEP 1** Display the “Phone” screen. (→P. 535)
- STEP 2** Touch “Speed Dials” on the “Phone” screen.
- STEP 3** Touch “(add new)” on the “Speed Dial” screen.
- STEP 4** Touch “Yes” to set new speed dial.
- STEP 5** Choose the desired data from the list.
- STEP 6** Touch the desired phone number.
- STEP 7** Follow the steps “Registering the speed dial” from “STEP6”. (→P. 564)

■ Registering the speed dial in a different way (From “Contact Data” screen)

 
- STEP 1** Display the “Phone” screen. (→P. 535)
- STEP 2** Touch “Contacts” on the “Phone” screen.
- STEP 3** Choose the desired data from the list.
- STEP 4** Touch “Options” on the “Contact Data” screen.
- STEP 5** Touch “Set Speed Dial” on the “Contact Data” screen.
- STEP 6** Touch the desired phone number.
- STEP 7** Follow the steps “Registering the speed dial” from “STEP6”. (→P. 564)

■ Deleting call history

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Delete Call History” on the “Phonebook Settings” screen.

STEP 3

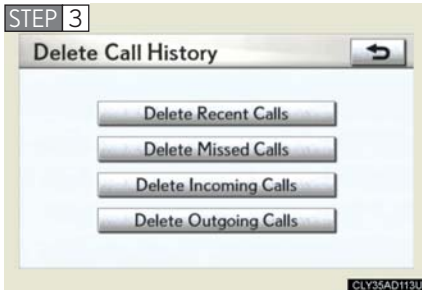

Choose the desired history to delete.

STEP 4



Choose the data to delete.

You can select multiple data and delete them at the same time.

To delete all data, touch “Select All”.

STEP 5 Touch “Delete”. A confirmation message will be displayed. If everything is correct, touch “Yes”.

■ Deleting call history in a different way

- STEP 1 Display the “Phone” screen. (→P. 535)
- STEP 2 Touch “Call History” on the “Phone” screen.
- STEP 3 Touch “Delete” on the “Call History” screen.
- STEP 4 Follow the steps “Deleting call history” from “STEP4”. (→P. 569)

■ Setting the voice tag

- Registering the voice tag
You can register a voice tag. Up to 20 numbers can be registered.

- STEP 1 Display the “Phonebook Settings” screen. (→P. 556)
- STEP 2 Touch “Manage Voice Tags” on the “Phonebook Settings” screen.
- STEP 3 Touch “New Voice Tag”.



Choose the data to register.



Touch “●REC”, and record a voice tag.

To play the voice tag, touch “▶ Play”.

STEP 6 When you complete the voice tag registration, touch “OK”.

● Editing the voice tag

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Voice Tags” on the “Phonebook Settings” screen.

STEP 3 Touch “Edit Voice Tags” on the “Voice Tags” screen.



Choose the data to edit.

STEP 5 Edit the voice tag. After editing, touch “OK”.

● Deleting the voice tag

STEP 1 Display the “Phonebook Settings” screen. (→P. 556)

STEP 2 Touch “Manage Voice Tags” on the “Phonebook Settings” screen.

STEP 3 Touch “Delete Voice Tags” on the “Voice Tags” screen.

3-5. Using the hands-free system (for cellular phone)



Choose the data to delete.

You can select multiple data and delete them at the same time.

To delete all data, touch "Select All".

STEP 5 Touch "Delete". A confirmation message will be displayed. If everything is correct, touch "Yes".

■ Setting the voice tag in a different way (To display the "Voice Tags" screen)

STEP 1 Display the "Phone" screen. (→P. 535)

STEP 2 Touch "Contacts" on the "Phone" screen.

STEP 3 Touch "Options" on the "Contacts" screen.

STEP 4 Touch "Manage Voice Tags" on the "Contacts" screen.

■ When using the voice tag

Do not change the language setting from the language setting used when registering. If they are different, the voice recognition cannot recognize the voice tag that you have registered.

■ When recording a voice tag

Do so in a quiet environment.

■ Registering the voice tag in a different way

STEP 1 Display the "Phone" screen. (→P. 535)

STEP 2 Touch "Contacts" on the "Phone" screen.

STEP 3 Choose the desired data from the list.

STEP 4 Touch "Options" on the "Contact Data" screen.

STEP 5 Touch "Set Voice Tag" on the "Contact Data" screen.

STEP 6 Follow the steps "Registering the voice tag" from "STEP5". (→P. 570)

Bluetooth[®] settings

You can confirm and change the Bluetooth[®] settings.



- 1 Changing the handsfree connection status
- 2 Changing the name in the Bluetooth[®] network
- 3 Changing the passcode that you registered your cellular phone in the system
- 4 The address peculiar to the system

You cannot change this address. If the same device name is displayed on the screen of your phone, refer to it.

To display the screen above, follow the steps below.

- STEP 1** Display the "Phone Settings" screen. (→P. 549)
- STEP 2** Touch "Bluetooth*" on the "Phone Settings" screen.

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

■ Changing the handsfree power

The Bluetooth[®] phone is automatically connected when you turn the “ENGINE START STOP” switch to ACCESSORY or IGNITION ON mode. You can change between “On” and “Off”.

STEP 1 Display the “Bluetooth* Information” screen. (→P. 573)

STEP 2 Touch “Handsfree Power” on the “Bluetooth* Information” screen.



Touch “On” or “Off”, and then “Save”.

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

■ Editing the device name

STEP 1 Display the “Bluetooth* Information” screen. (→P. 573)

STEP 2 Touch “Edit” of “Device Name” on the “Bluetooth* Information” screen.

STEP 3 Input the device name, and touch “OK”.

 
STEP 4 Touch “Save” on the “Bluetooth* Information” screen.

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

■ Editing the passcode

STEP 1 Display the “Bluetooth* Information” screen. (→P. 573)

STEP 2 Touch “Edit” of “Passcode” on the “Bluetooth* Information” screen.

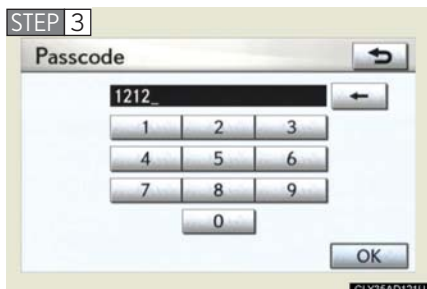

Input a passcode, and touch “OK”.

STEP 4 Touch “Save” on the “Bluetooth* Information” screen.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ While driving

You cannot change “Handsfree Power” mode from “On” to “Off” while driving.

■ About “Device Name”

The device names are common Bluetooth® audio and Bluetooth® phone.

If you change the device name of the phone, the device name of the audio will change at same time. However, passcodes can be set separately.

■ To return to the default Bluetooth® settings

Touch “Default”, and then “Yes”.

If “Handsfree Power” mode is changed from “Off” to “On”, Bluetooth® connection will begin.

Details settings



CLV35AD122U

1 Changing the incoming call display mode

2 Changing the display phone status

To display the screen above, follow the steps below.

STEP 1 Display the "Phone Settings" screen. (→P. 549)

STEP 2 Touch "Details" on the "Phone Settings" screen.

■ Changing the incoming call display mode

You can select the method of the incoming call display.

STEP 1 Display the “Detailed Phone Settings” screen. (→P. 576)

STEP 2 Touch “Incoming Call Display Mode” on the “Detailed Phone Settings” screen.



Touch “Full Screen” or “Drop Down”, and touch “Save”.

“Full Screen”:

The hands-free screen is displayed when a call is received, and you can operate the system from that screen.

“Drop Down”:

A message is displayed at the top of the screen, and you can only operate the system with the steering switches.

■ Changing the display Phone status

You can set the system to show the status confirmation display when connecting.

STEP 1 Display the “Detailed Phone Settings” screen. (→P. 576)

STEP 2 Touch “Display Phone Status” on the “Detailed Phone Settings” screen.

STEP 3 Touch “On” or “Off”, and then “Save”.

■ To return to the default detailed Phone settings

Touch “Default”, and then “Yes”.